

Please Leave 2m Tails on all cables into Cabinet
DO NOT Cut the HDMI Cable

- Ceiling Speaker**
Note: Backing Boxes need to be installed before plasterboard is fitted.
- BT Telephone Point**
Required if Sky is Installed.
- Mains Supply**
2x Double Sockets required in system cabinet.
- Lutron GRX3106 Lighting Control Panel**
(Mount at Normal Light Switch Height - Triple J Box Required)
- Lutron EGRX4S Lighting Control Panel**
(Mount at Normal Light Switch Height - 35mm Backing Box Required)
- 35mm Backing Box at Ceiling Height**
- Motorised Curtain**


Please leave tails of 1000mm at all unterminated ends. (Speaker cables, Lighting etc.)

Note:
Please avoid running any video and audio cables alongside mains cable. A minimum gap of 50mm is required if they need to be run in close proximity

Please mount the network wall plates and aerial connections at usual socket height.

Please note exact placement of all lights and ceiling speakers are subject to the clients final decision.

To 6A MCB

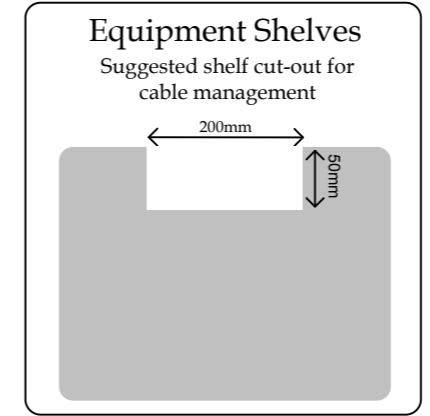

- CXCT100 Screened Coax (Black Cable)**
- CX16/2 2 Core Speaker Cable (Pink Cable)**
- CX5 Component Video Cable**
- HDMI Video Cable**
- Lutron Lighting Control Cable**
- QXCAT5UTP Data Cable**
- 3 Core + Earth Mains Cable**
- 1.5mm Twin+Earth Mains Cable**

- 1** Spots in slope of ceiling which can be angled down
 - 2** Wall Lights
 - 3** Spots mounted on wall pointing at opposite wall / curtain
 - 4** Middle downlighter circuit
 - 5** Rear downlighter circuit
 - 6** Bar area
- All Tails from lights to GRX3106 Panel

